


Quick start guide CCT3A-2215-IN Care Call Trickle Charger

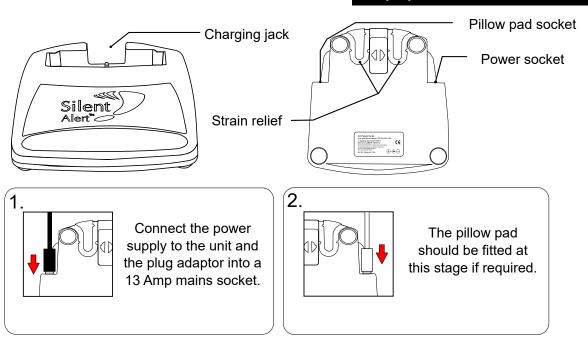

Any questions? Call us on +353 (0)1 247 9007



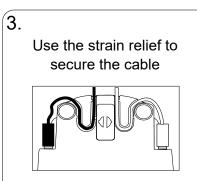

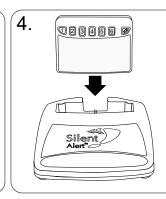


Dock the pager in to the Charger.

The battery key on the Pager will light green briefly upon docking and the Charger will beep 3 times confirming the Pager is docked correctly.

If a Pillow Pad is fitted it will vibrate three times when the Pager is docked.

We recommend a full 24 hour charge before using our equipment. In an emergency a few hours charge may be sufficient for short time use but this is not advised.

Fault indication

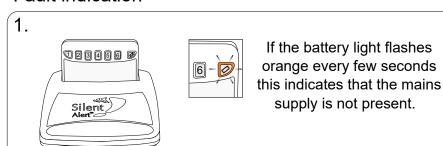

Check the Power Supply is firmly connected to the unit.

Remove the Pager, wait a few seconds then re-dock. The battery light should now shine green.

Do not immerse the Trickle Charger in water or any other liquid. Do not subject the unit to excessive mechanical shock. The Trickle Charger should be placed on a smooth, hard surface and away from other objects to ensure correct ventilation. Do not cover the unit or place on soft or carpeted surfaces.