

Quick start guide CCS-CO-DETECTOR Care Call Wireless Carbon Monoxide Alarm



Any questions? Call us on +353 (0)1 247 9007

be replaced.

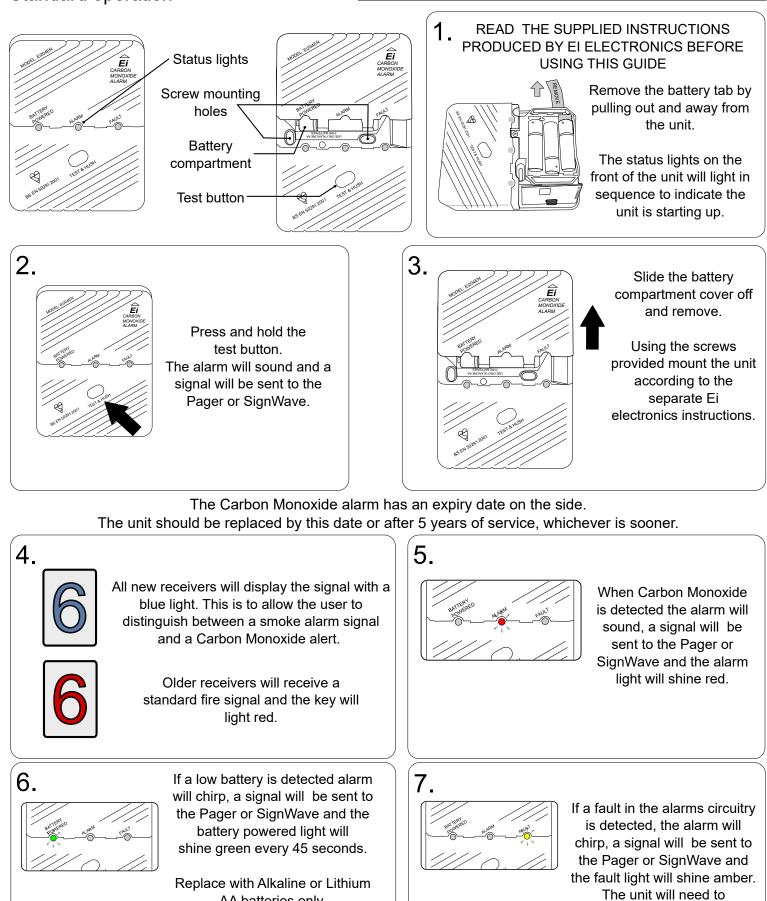

AA batteries only.

Press and hold the test button to check the unit operates correctly.

Advanced settings CCS-CO-DETECTOR


Care Call Wireless Carbon Monoxide Alarm



Changing the zone

Any questions? Call us on +353 (0)1 247 9007

NOTE. If you have a monitor already set to zone one, the Carbon Monoxide alarm can be configured to another zone as follows.

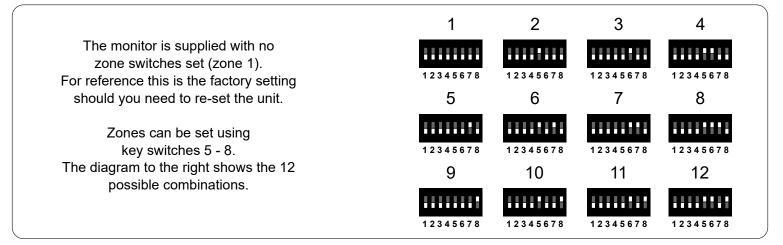

Telecare SignWave activation

NOTE. The following setting will not activate a standard Care Call Pager & SignWave. Only use them with the Care Call CCS3A-2217-EU-TL.

When configured in this way the Keyfob will only activate the Care Call Telecare Link SignWave. This can be used to trigger an auto dialler or other third party equipment.



Changing the system channel code

NOTE. In most cases it is not necessary to change the system code. However, when one or more systems are in close proximity, system codes can be used to avoid interference from other Care Call systems using up to a maximum of 16 system channels.

	1	2	3	4
The monitor is supplied with no				
system code switches set (system code 1).	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	12345678	1 2 3 4 5 6 7 8
For reference this is the factory setting should you need to re-set the unit.	5	6	7	8
System codes can be set using	12345678	12345678	12345678	12345678
key switches 1 - 4. The diagram to the right shows the 16	9	10	11	12
possible combinations.				*******
Be sure that the same system code is set on the receiver to be used and any other monitors in that system.	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
	13	14	15	16

	12345678	12345678	12345678	12345678

Silent Alert International

www.silentalert.ie

+353 (0)1 247 9007